


RADOX - HEATON

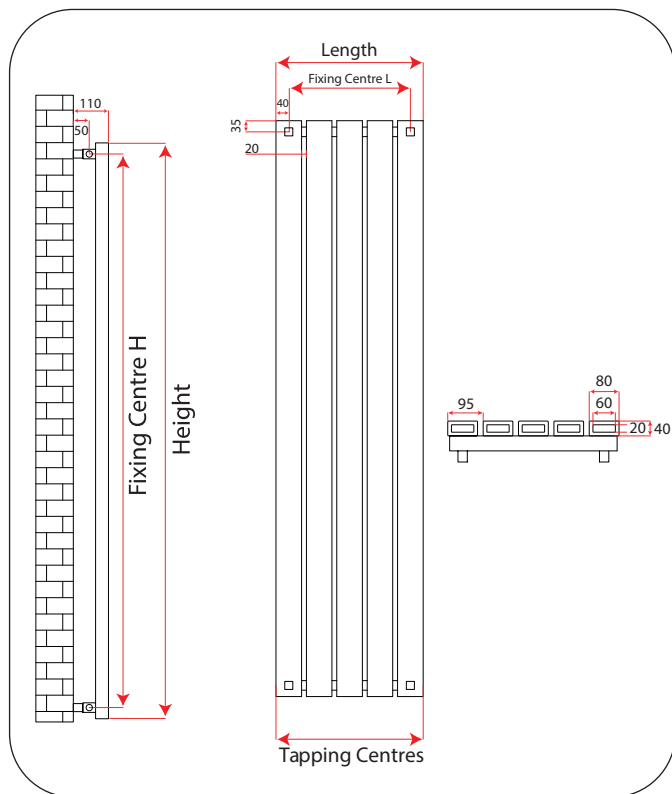


Please Note:

- Please allow minimum of 100mm for valves
- Summer Element use will affect pipe centres
- The flow and return can be reversed

- All the dimensions are shown in millimetres
- Tube dia 80mm x 40mm
- Bracket length - 50mm
- ½ inch BSP bottom opposite end connections
- Test pressure: 10 Bar
- Max working temperature: 8 Bar
- Heat output - in accordance with EN 442

HEATON	Water Content (L)	Weight (KG)	Tapping Centres +/- 2mm	Fixing Centres (H) +/- 2mm	Fixing Centres (L) +/- 2mm	Height (mm)	Length (mm)
RXHT-1500460	19	21	535	1430	380	1500	460
RXHT-1700460	16	25	535	1730	380	1700	460

Installation:

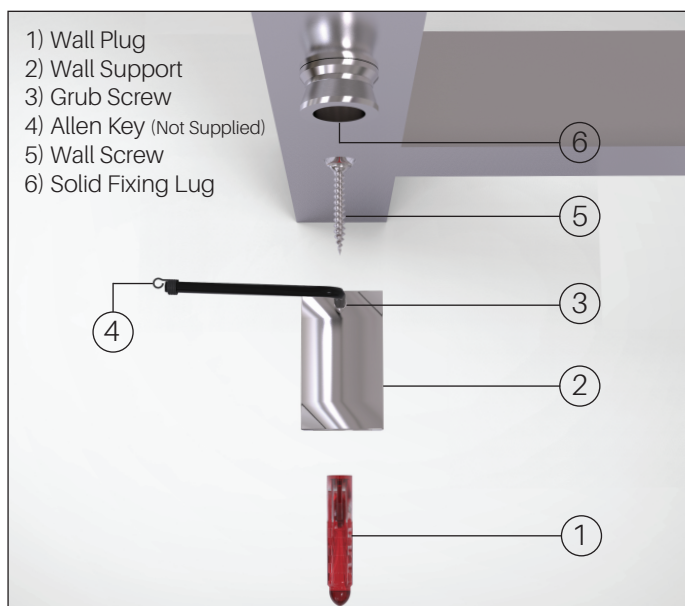

Step 1: Select the desired mounting position, make sure the wall is adequate to take the fixing points of the rail i.e anchor points must be securely attached to a stud or masonry.

Step 2: Loosely screw the wall support (Part 2) into the wall using the wall screw (5) and washer. Use wall plug (1) if you are fixing into masonry. Do not tighten fully.

Step 3: Manoeuvre the rail back onto the bracket and tighten with the grub screw (3).

Cleaning:

- Do not use any abrasive or chemical cleaners to clean the radiators as this will cause damage to the surface finish. Please use warm water and a damp cloth.
- Do not clean when hot.