
# IDEALBLUE <sup>®</sup> TECHNOLOGY – PROVIDING PERFECT WATER QUALITY AND SAFETY

### INNOVATION

- Nickel and lead free waterways in the body
- Reduced water content and stagnation time
- Adjustable cleaning mode

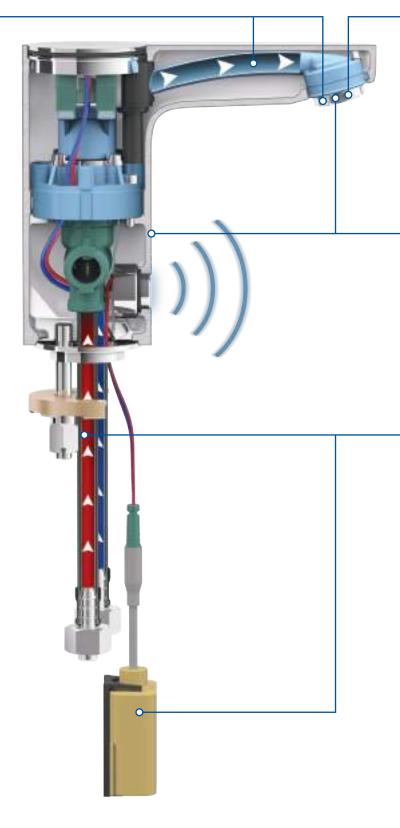

## SUSTAINABLE

#### Energy saving

- 4 litres per minute flow regulator
- Self-closing function
  Solenoid valve closes
  2s after sensor no longer detects movement
- Automatic flow stop after 55 seconds of continuous operation

## SAFETY

## Designed for safe operation

- Insulated waterways ensure a cool body
- No risk of scalding on the exterior surface

# EASY TO

#### Easy to maintain

- Flexible hoses
- Isolation valves with filters and check valves
- Easy-Fix quick and easy installation requiring only one hand under the basin
- Integral sensor and electronics
- Easy to install battery versions not requiring mains connection

# SENSORFLOW WAVE A NEW RANGE OF MODERN WATER SAVING FITTINGS



#### ARMITAGE SHANKS MENA

IDEAL STANDARD GULF FZCO Jebel Ali, Dubai P.O. Box 261559 United Arab Emirates

Head Offices Dubai tel. +971 48042400 Sales Offices Athens tel. +30 210 6790800 Email: infogulf@armitageshanks-mena.com

IDEAL STANDARD INTERNATIONAL EGYPT Regional Sales Office 117, El Thawra St., Heliopolis, Cairo Egypt

Tel. +2 (02) 24145807 +2 (02) 24186321 +2 (02) 24186323 Fax.: +2 (02) 24186323 Email: infoafrica@armitageshanks-MENA.com

www.armitageshanks-MENA.com





# SENSORFLOW TECHNOLOGY SAFE AND EFFICIENT



A new range of Sensorflow technology brassware that combines stylish design with unique safety features, whilst also being easy to install and exceptionally easy to use.

The rim mounted taps and mixers use new water safety technology, the first of its kind, to set the standards for drinking water quality in the market place. Innovative Ideal Blue<sup>®</sup> technology prevents deposits of lead and nickel from contaminating the drinking water and also reduces water stagnation thanks to an integrated water management system. Not only are these fittings beautifully designed and safer to use, they are also more environmentally friendly as water and energy use is reduced by the factory fitted flow regulator and the reduced water content.



The Sensorflow Wave built-in fittings all have the functional benefits of thermostatic temperature control which combines accurate control of the mixed water temperature and exceptionally safe protection from scalding. Whilst they are all very easy to use, some have a user adjustable temperature control whereas others have the mixed water temperature fixed by the installer or service engineer and offer the hygienic benefit of thermal disinfection.

Each fitting features a unique control module using an infrared sensor system. This control system can manage different functions as required for each fitting, such as auto flushing, cleaning mode and continuous operation for thermal disinfection.





The design was developed by the renowned design ARTIFAKT Industrial Culture. Founded in 1989 by Achim Pohl and Thomas Fiegl.

## EASY STEP BY STEP GUIDE TO THERMAL DISINFECTION

### BUILT-IN FITTINGS WITHOUT USER TEMPERATURE ADJUSTMENT





1. Loosen grub screw 2. Remove cover

3. Loosen the screw



4. Remove cover holder

5. Attach Multitool



6. Press Multitool 90° towards faceplate to obtain maximum hot water temperature



7. Use the remote control to select a duration for thermal disinfection and flow starts immediately

## THE IDEAL COMBINATION

ANTI VANDAL FIXED SHOWER HEAD

Grip and twist resistant design Supplied with 6 and 8 litre per minute flow regulators for water saving.

A5452AA panel mounted with back inlet A4672AA back inlet for solid wall fixing A5451AA bottom inlet for solid wall fixing



A4672AA

### THERMOSTATIC MIXING VALVE

Designed to supply premixed water at a maximum predetermined temperature to non-thermostatic outlet fittings such as the rim mounted Sensorflow Wave fittings to ensure safe, scald free operation.

A5900AA with 15mm connections for basin filling and lower flow rates A5901AA with 22mm connections for bath filling and higher flow rates

A5900AA



# BASIN TAPS AND MIXERS

#### 1 hole basin mixer with temperature control

### 1 hole basin tap





Description Battery (6V lains (230V Description Battery (6V)

- User adjustable temperature control
- IdealBlue<sup>®</sup> nickel and lead-free waterways Integrated sensor and electronics
- Auto stop after 55s continuous running
- 4 lpm outlet flow regulator
- Cleaning mode
- Easy-Fix quick mounting system
- Flexible hoses
- Isolation valves with filters and check valves Optional remote control programmer F960970NU




Code

A6162AA

A6163A

- 4 lpm outlet flow regulator
- Cleaning mode Flexible hoses
- Optional remote control programmer F960970NU

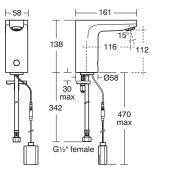



116 ---- 11

## SHOWER FITTINGS

Thermostatic built-in

temperature control

shower mixer with user

Code A6160A

 IdealBlue<sup>®</sup> nickel and lead-free waterways Integrated sensor and electronics Auto stop after 55s continuous running


• Isolation valves with filters and check valves


**Thermostatic built-in** basin mixer with user temperature control



escription	Code
60mm spout, battery (6V)	A6164A
0mm spout, mains (230V)	A6165AA
30mm spout, battery (6V)	A6168A
30mm spout, mains (230V)	A6169A


- User adjustable temperature control
- Thermostatic cartridge for scald prevention 150 and 230mm spout options
- Easybox built-in plastic box with double water sealing
- Multiple fixing options
- Integrated electronics
- Auto stop after 55s continuous running
- 4 lpm outlet flow regulator
- Safety button on temperature control Optional remote control programmer F960970NU





Thermostatic built-in basin mixer without user temperature control





- 150 and 230mm spout options • Easybox built-in plastic box with
- double water sealing Multiple fixing options
- Integrated electronics
- Auto stop after 55s continuous running
- 4 lpm outlet flow regulator

• Outlet temperature set by installer

- Optional remote control programmer F960970NU

	Ó
Description	Code
Battery (6V)	A6172AA
Mains (230V)	A6173AA

and a

- F960970NU





Thermostatic built-in





Description	Code
Battery (6V)	A6174AA
Mains (230V)	A6175AA


- Outlet temperature set by installer
- Thermostatic cartridge for scald prevention Easybox built-in plastic box with
- double water sealing
- Multiple fixing options
- Integrated electronics
- Auto stop after 55s continuous running
- Thermal disinfection mode Optional remote control programmer
- F960970NU

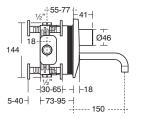
















- Thermal disinfection mode


- A6167AA









- Auto stop after 55s continuous running
- Safety button on temperature control Optional remote control programmer







# PROGRAMMING

All Sensorflow Wave fittings are factory set to operate satisfactorily in most installations. However, to optimise operation for each particular installation many of the default settings can be changed. This can be done in 2 ways:

1. Manual Programming (limited functions can be changed)

**2.** Full Programming using a remote control programmer (all functions can be changed)

#### 1. Manual Programming

Sensor range and Run time can be changed.

For Manual Programming the power needs to be turned Off then On. The sensor then re-boots and programming can be carried-out. If the sensor has a Run time function (e.g. showers) then this can also be changed. All other functions such as Purging and Cleaning can only be set using the Remote control programmer (see Full Programming).

#### 2. Full Programming

This requires a Remote controlled programmer which is supplied separately (Part no. F960970NU). With this programmer all settings can be changed on all built-in fittings, including Sensor range, Purging and Operating modes. Note no settings can be changed on the 1 hole basin fittings.

In Full Programming using the Remote control programmer there is no need to turn the power On/Off, and all programming can be done in front of the fitting. If the sensor has a Run time function (e.g. showers) then the Run time can also be changed.

Detailed programming information comes with the products.

			Fixed settings	Adjustable settings			
Programme Mode		Description		Name	Factory setting	Range	Step
1 Clear		Fitting is turned Off to allow cleaning					
	Cleaning	Sensor and valve are turned Off for a fixed duration of 60s	60s				
		At the end of this time it resets to normal operation					
2 Pu		Operates the fitting for a set duration		Purging duration	Off	1120	minutes
	Purging	Fitting can be turned On for 1 to 120 minutes					
		At the end of this time it resets to normal operation					
3	Diagnostic	Displays current settings					
4	Operating	3 operating modes (see below)					
4.1		Water flows while sensor is triggered		4.1.1 Auto flush frequency	Off	6, 12, 24, 48, 72	hours
	Proximity <sup>1</sup>	Flow continues for 2s after sensor is no longer triggered	2s	4.1.2 Auto flush duration	15s	1240	1 second
		Safety shut-off if sensor is triggered continuously	55s				
4.2		When sensor is triggered water flows for the set run time		4.2.1 Run time <sup>4</sup>	15 s	1, 2, 3.25, 7.5, 15, 30, 60, 120, 240	seconds
	Timed <sup>2</sup>	At the end of this timed period it turns off		4.2.2 Auto flush frequency	Off	6, 12, 24, 48, 72	hours
		Safety shut-off if sensor is triggered continuously		4.2.3 Auto flush duration	15s	1240	1 second
4.3		When sensor is triggered water flows for the set run time		4.2.1 Run time <sup>4</sup>	15s	3.25, 7.5, 15, 30, 60, 120, 240	seconds
	On/Off <sup>3</sup>	If the sensor is triggered while running it turns off immediately		4.3.2 Auto flush frequency	Off	6, 12, 24, 48, 72	hours
		Triggering the sensor toggles operation On/Off		4.3.3 Auto flush duration	15s	1240	1s

Notes

<sup>1</sup>Basin taps and mixers are factory set to this mode

<sup>2</sup>No Sensorflow Wave fittings are factory set to this mode

<sup>3</sup>Showers are factory set to this mode

<sup>4</sup> Run time can only be changed for Showers