


- All the dimensions are shown in millimetres
- Tube dia 50mm x 30mm
- Header tube dia 20mm
- Bracket length 50mm
- 1/2 inch BSP bottom opposite end connections
- Test pressure: 10 Bar
- Max working temperature: 8 Bar
- Heat output in accordance with EN 442

Please Note:

- Please allow minimum of 100mm for valves
- Summer Element use will affect pipe centres
- Not suitable for use on domestic hot water system
- The flow and return can be reversed

Linx	Water Content (L)	Weight (KG)	Tapping Centres +/- 2mm	Fixing Centres (H) +/- 2mm	Fixing Centres (L) +/- 2mm	Height (mm)	Length (mm)
RXLX-0750500	4,8	7.4	50	500	50-100	750	500
RXLX-1150500	7.3	11.1	50	900	50-100	1150	500
RXLX1550500	9.7	14.9	50	1200	50-100	1550	500

Installation:

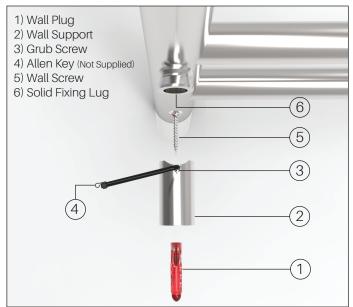

Step 1: Select the desired mounting position, make sure the wall is adequate to take the fixing points of the rail i.e anchor points must be securely attached to a stud or masonry.

Step 2: Loosely screw the wall support (Part 2) into the wall using the wall screw (5) and washer. Use wall plug (1) if you are fixing into masonry. Do no tighten fully.

Step 3: Manoeuvre the rail back onto the bracket and tighten with the grub screw (3).

Cleaning:

- Do not use any abrasive or chemical cleaners to clean the radiators as this will cause damage to the surface finish. Please use warm water and a damp cloth.
- Do not clean when hot.

Radox Radiators LTD, Radox House, Midlands Industrial Estate, Holt, Trowbridge, Wiltshire, BA14 6RU 01225 782 819 info@radoxraditors.com www.radoxradiators.com